


**Let's play**  
**Piano Plus**  
HP-20

 **Roland**

## First of all

 
- 1 Make sure that the Power switch is off, then plug the cord into the wall outlet.

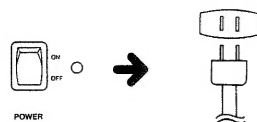

- 2 Connect the Pedal Switch to the jack on the rear panel of the HP-20.



- 3 Set the Volume to '0'.



## Let's Play the HP-20.

### 1 Turn the Power switch on.




### 2 Set the Volume to '5'.




### 4 What's your favorite tone color? TONE SELECTORS

- There are 2 types of tone colors: PIANO and HARPSICHORD.

- You can combine these two tone colors.

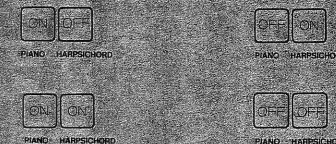


- \* Press the buttons you select at the same time.

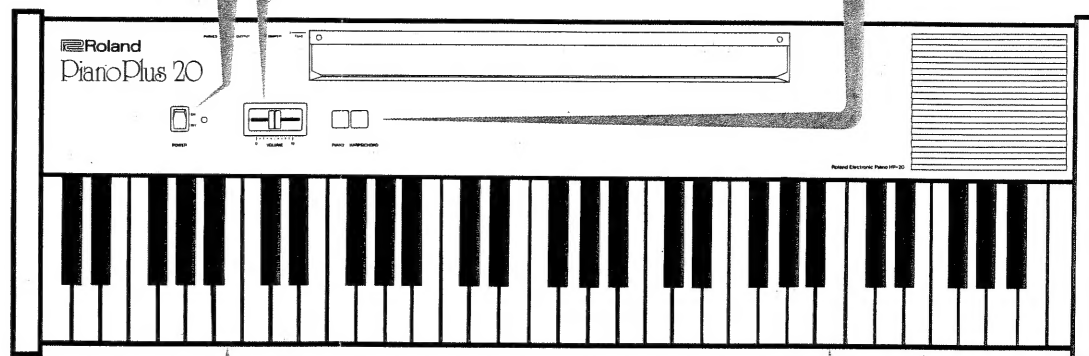


### 3 Now, begin to play!

- You can play up to 8 notes at the same time.
- Adjust the volume by using the Volume control knob.

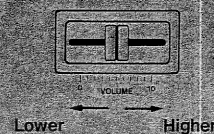

### 5 Enjoy playing with natural expressions ..... SUSTAIN


- Play a slow ballad with a long sustain.

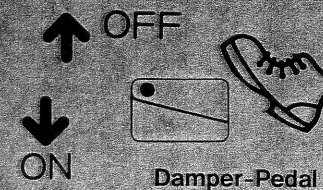


HP-20

## Rear Panel

 PHONES



### Headphone jack

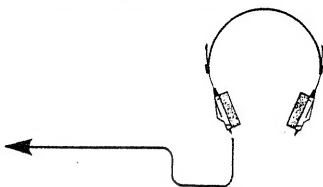


- \* Stereo headphones can be connected to.
- \* Control the volume with the Volume adjust knob.
- \* Connecting the headphones will automatically cut off the sound from the built-in speakers.

OUTPUT




### Output jack

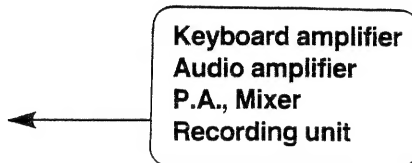


- \* Connecting the cord automatically cuts off the sound from the built-in speakers.
- \* Adjust the volume of the HP-20 according to the connected unit.

## Setting-up


### Audio amplifier

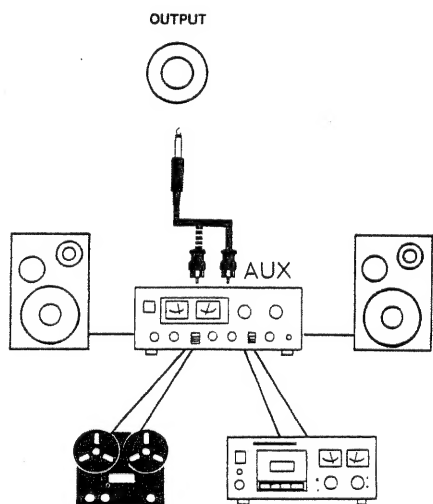

### Keyboard amplifier or Guitar amplifier

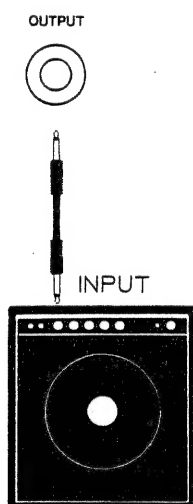

### P.A., Mixer

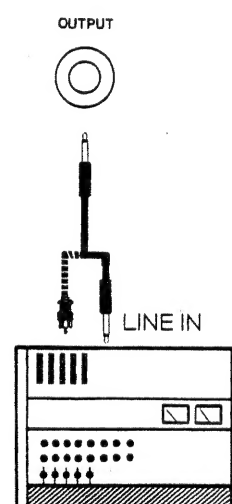

## Tuning

- \* This piano is tuned at A = 442 Hz, but adjust the TUNE adjuster on the rear panel if you need to change the pitches to play with other instrument in tune

TUNE



## Location

- Keep this unit as far away as possible from fluorescent lamps, neon lights and transformers..

- Avoid using this unit in the place of dust, heat or humidity.


## Cleaning

- Clean the control panel with neutral detergent, then wipe it with a dry, soft cloth.

- Clean the wooden parts with a dry, soft cloth.

- Do not use solvents such as paint thinner.

## Diagram of Sound Compass

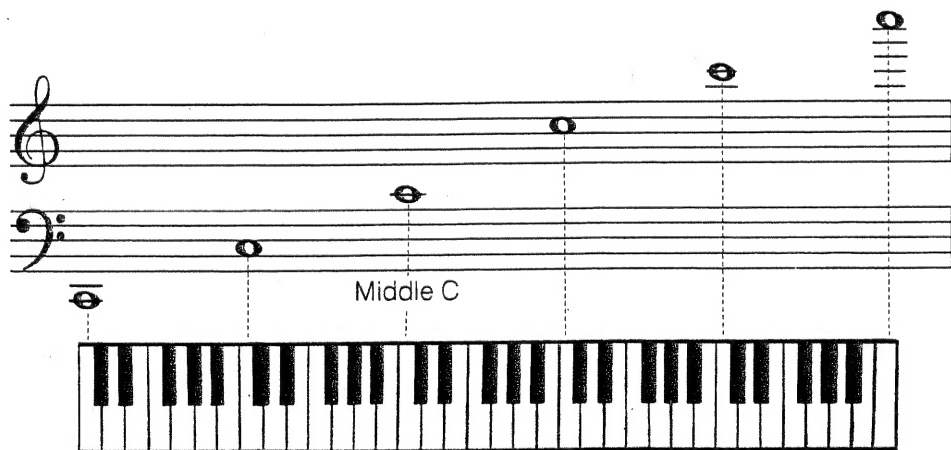

## Specification

● **Keyboard** (61 keys,  
5 octaves)

● **Tone Selectors**

PIANO

HARPSICHORD

● **Damper**

Damper (ON, OFF)

● **VOLUME**

● **TUNE**

● **POWER switch**

● **SPEAKERS** (12 × 8 cm 2W)

● **REAR PANEL**

Headphone jack

Output jack

Damper pedal jack

TUNE

● **Consumption** ..... 15 W

● **Dimensions** .....

912(W) × 268(D) × 89(H)mm

35 $\frac{7}{8}$ (W) × 10 $\frac{9}{16}$ (D) × 3 $\frac{1}{2}$ (H)in

● **Weight** ..... 6.6kg 14lb 9oz

● **Accessories**

Music rack

Pedal switch (DP-2)

Cover

※ **Specifications are subject to  
change without notice.**

## Options


● **Headphones** RH-10



● **Soft-case** SC-60



● **Stand** KS-4

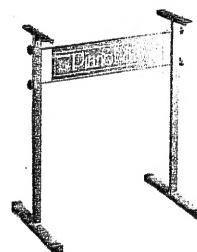

 Roland®

---

**10157**

UPC

10157



10981

 Roland®